

# iTemp Express™

## QUICK START GUIDE

### iTemp Express™ (PC Software) Setup

- Visit <http://www.greentechheat.com/support/itemp-wireless/> to download and install the *iTemp Express* software.
- Launch the *iTemp Express* installer and follow the on-screen instructions.
- Launch the *iTemp Express* program.
- Activate the Express software with the code you received when purchasing.



- Add the gateway(s) and wireless sensors to the software.



ID: ZTL-RFUSB1  
IC: 9794A-RFUSB1

ID: #### Code: XXXXXX


- Click on “About”, then “Local IP Addresses” and make note of the IP address that your computer is using on your network.



### Gateway Setup for iTemp Express™

#### USB Gateway

- Visit <http://www.greentechheat.com/support/itemp-wireless/> to download the GreenTech USB Driver and USB Gateway Application.
- Install the GreenTech USB driver and USB gateway application by launching the downloaded files and following the on-screen instructions.
- Launch the iTemp Link Gateway application.
- Start the gateway’s local service.

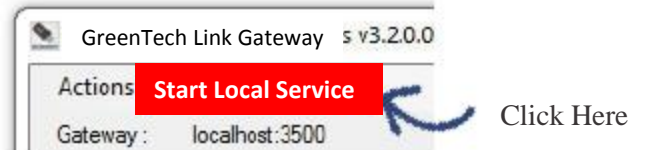

- Click “Actions” then “Configure Server Location”.



- Enter the IP address from *iTemp Express* into the server address box, and use 3000 as the default communication port, then click save.




- Plug the USB gateway into your PC.

# Power Up Sensors and begin using the *iTemp Express™* Software.

- Check that the gateway status has changed to active in *iTemp Express*.



- Insert batteries into the wireless sensors.

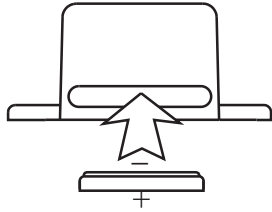

- Check that the sensors change to active.



- The *iTemp Express* software is now collecting sensor data.

The *iTemp Express™* software is now collecting sensor data.

